



Installation Guide

Cloud-Managed Wireless Access Point


WI-AP210/AP-AP210-Lite/WI-AP215/WI-AP216/WI-AP217/WI-AP217-Lite
WI-AP415/WI-AP315/WI-AP317/WI-AP510/WI-AP218AX/WI-AP218-Lite
WI-AP219AX/WI-AP518AX

www.wireless-tek.com

Package Contents: Wireless access point, Self-tapping Screws, QIG.

Interface and Indicators

LED indicator instructions

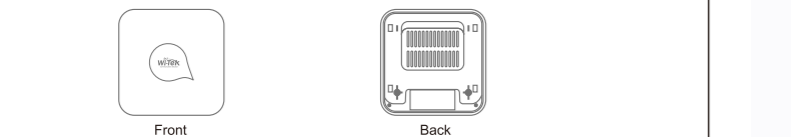


Name	Normal Status	Instruction
System Light/WiFi	Red Light	System boots up successfully
	Green Light	WiFi boots up successfully

Two LED Indicator	Name	Normal Status	Instruction
	Red Light	Bright	System boots up successfully
		Flashing	System reset default
	Green Light	Flashing	Wireless boots up successfully

* The number of LEDs for different models of ceiling mount AP will be different, please refer to the actual product. * 11AX WiFi AP need 1 minutes system boots up from powered on, during this time, LED will off

Ports Instructions



Ports & Buttons	Ports Instructions
DC	Power port
LED Indicator	Led indicator will be bright when Ethernet cable is connected
Reset	Reset button will make device revert to factory settings, press it for 10 seconds when powered, device will reboot
WAN	Connect WLAN internet, WAN port connect to ADSL modem or community broadband cable. Under AP, repeater mode, WAN port will be changed to LAN port
LAN	LAN port which can connect LAN device



* The interface for different models of products may be different, the above diagram is only for reference, pls refer to the actual product!

Operational environment.




Suitable for safe use in areas below to 2000 meters based on sea level. Only Suitable for safe use in non-tropical climatic conditions.

Typical Connection

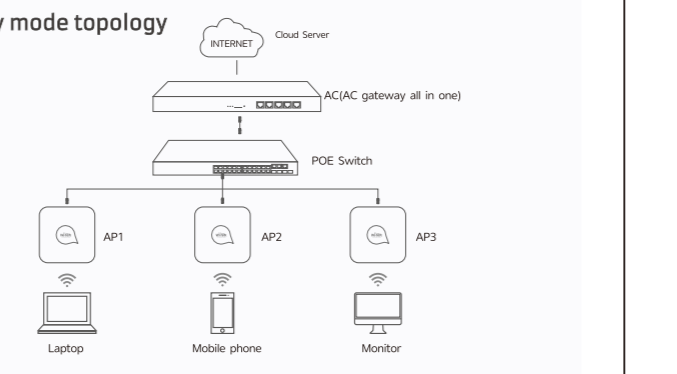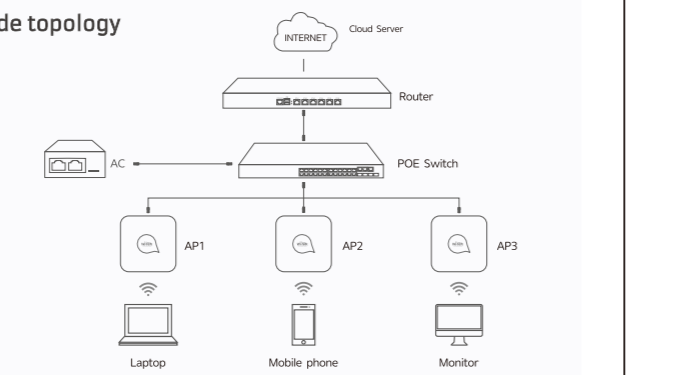


Device Installation


Ceiling Mount Installation

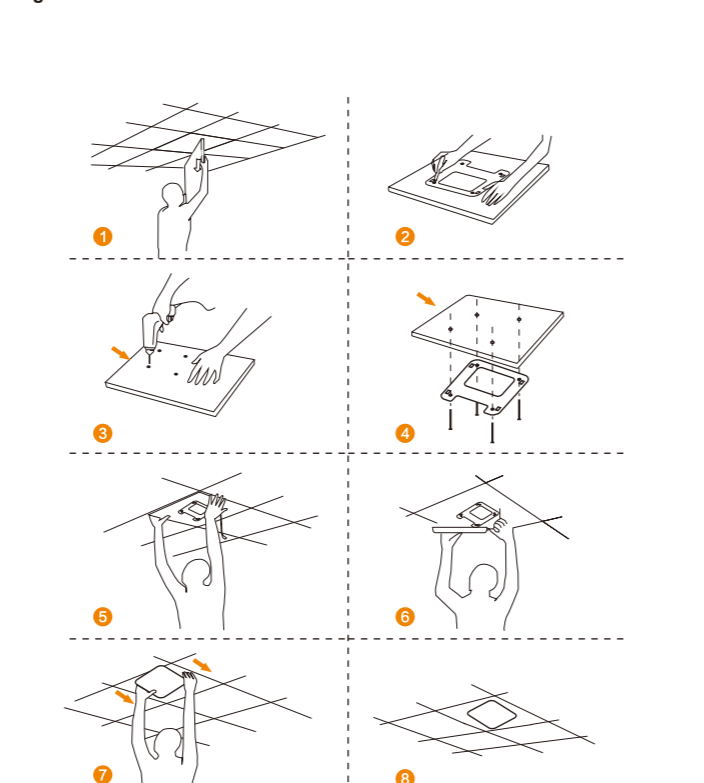

Pole Mount Installation

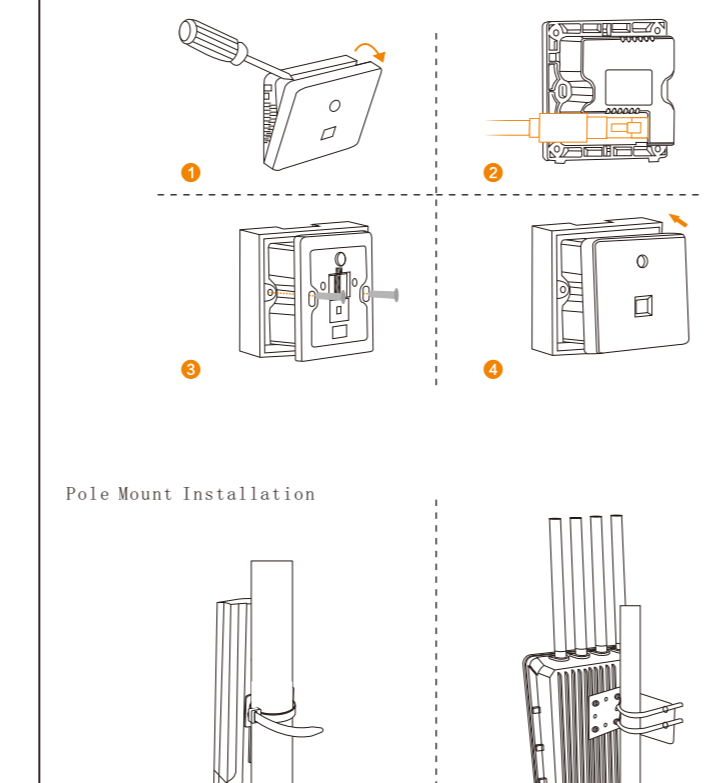

Configuration Method

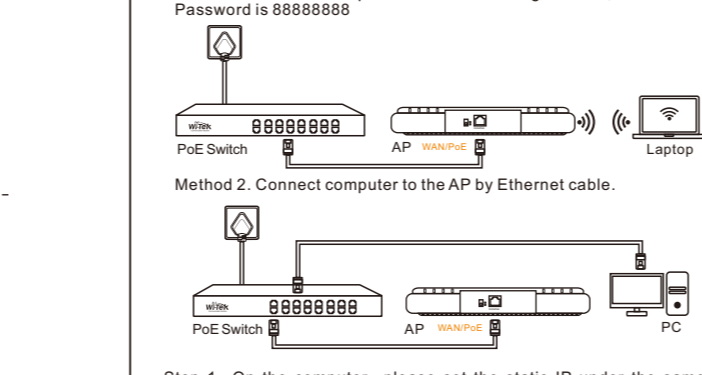

Method 1. Connect computer to the wireless signal of AP, the default SSID is "WI-TEK xxxx". Password is 88888888

Method 2. Connect computer to the AP by Ethernet cable.

Step 1. On the computer, please set the static IP under the same subnet with AP, 192.168.1.xx


Step 2. Please launch a browser such as Google Chrome or Firefox, type 192.168.1.88 into address bar and click on enter to get in the login page of wireless access point. The default login password is "admin".

*Login device

admin [eye icon] Login

Step3. After get in the management page, On the left side menu, please go to [Wizard] to setup the access point

Configuration Method

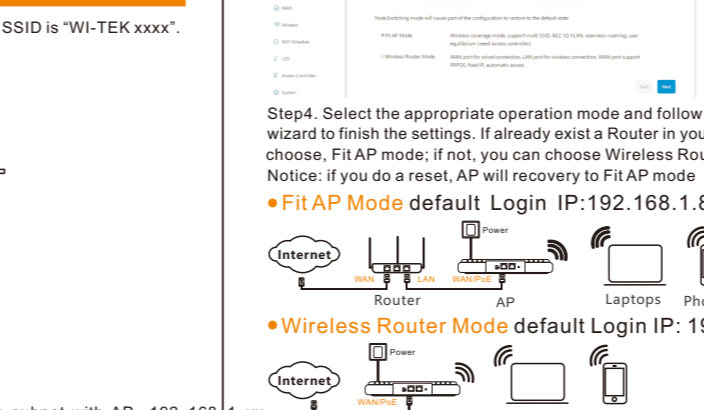


Step4. Select the appropriate operation mode and follow the instruction of wizard to finish the settings. If already exist a Router in your network, please choose, Fit AP mode; if not, you can choose Wireless Router mode. Notice: if you do a reset, AP will recovery to Fit AP mode

• Fit AP Mode default Login IP: 192.168.1.88 admin/admin

• Wireless Router Mode default Login IP: 192.168.11.1 admin/admin

Cloud management settings

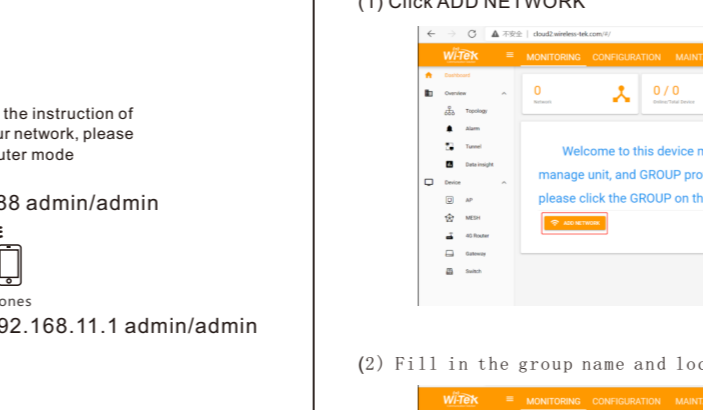

Step 1 Launch your web browser then enter <http://cloud2.wireless-tek.com> in the address bar.

Step 2 Register an account password by user name or email.


Step 3 log in to the cloud account with the account password after registration.

Name/Email Login form with fields for Name/Email and Password.


Step3. After get in the management page, On the left side menu, please go to [Wizard] to setup the access point

After the login is successful, the steps to bind the device on the cloud account are as follows:


(1) Click ADD NETWORK

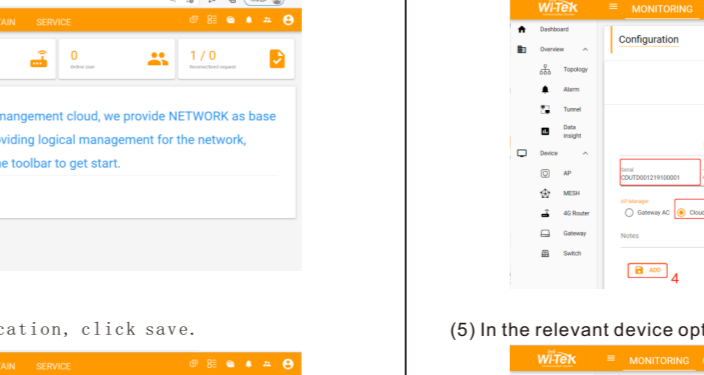

(2) Fill in the group name and location, click save.

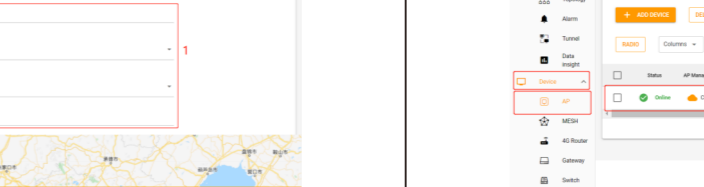


(3) And click next.

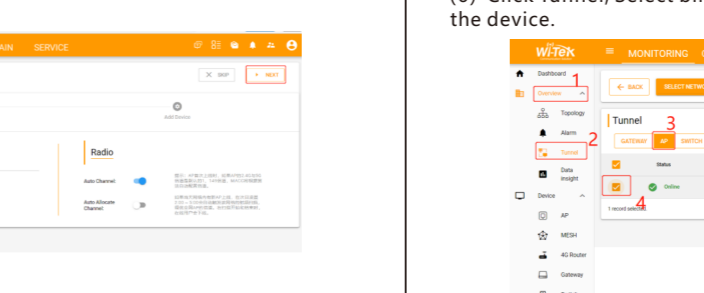


(4) Enter serial number, click ADD to create and click FINISH, the configuration is complete.


Note: The 17-digit SN code of the Add device is shown on the sticker on the back of the device.

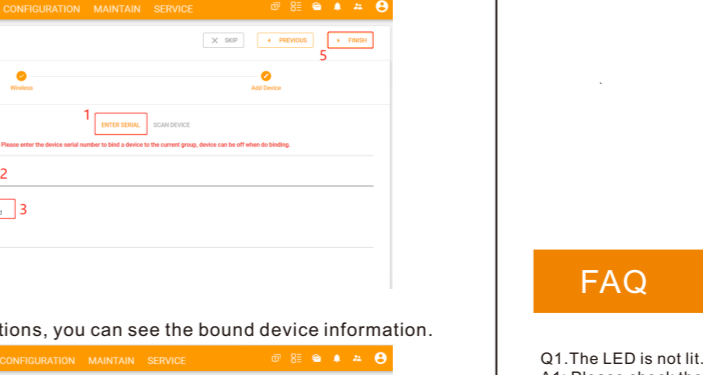


(5) In the relevant device options, you can see the bound device information.

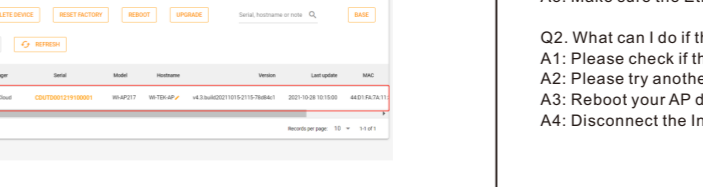

(6) Click Tunnel, Select binding device type, click EWEB to log in to the device.

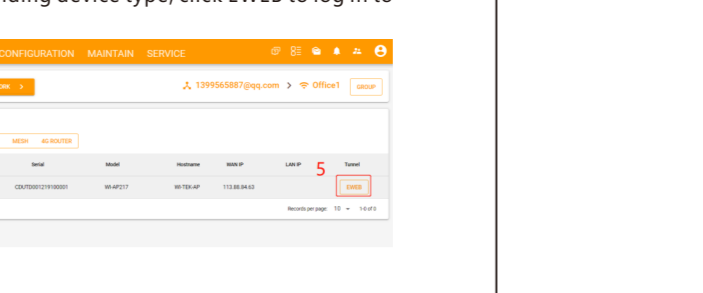

Add EWEB



FAQ

- Q1. The LED is not lit.
A1: Please check the PoE switch is 802.3af/at.
A2: Make sure the PoE switch is outputting the correct voltage.
A3: Make sure the Ethernet cable does support PoE function.
- Q2. What can I do if the login window does not appear?
A1: Please check if the computer is the static IP 192.168.1.xxx.
A2: Please try another browser.
A3: Reboot your AP device and try again.
A4: Disconnect the Internet connection and try again, after login, connect to the internet.

Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

If the product defects within three months after purchase, we will provide you a new product of the same model. If the product defects within the three-year warranty period, we will provide the professional maintenance service. Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty. Any other defects that are not caused by workmanship or product quality, such as natural disaster, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card losing will disqualify the product from limited warranty.



Wireless-Tek Technology Limited
Address: Room 402 4F, BiaoFan Technology Building, Bao'An Avenue, FuYong Town, Bao'An district, ShenZhen
Website: www.wireless-tek.com
Tel: 86-0755-32811290
Email: sales@wireless-tek.com
Technical Support: tech@wireless-tek.com

